


# How to read the schematics

## Diagram Layout

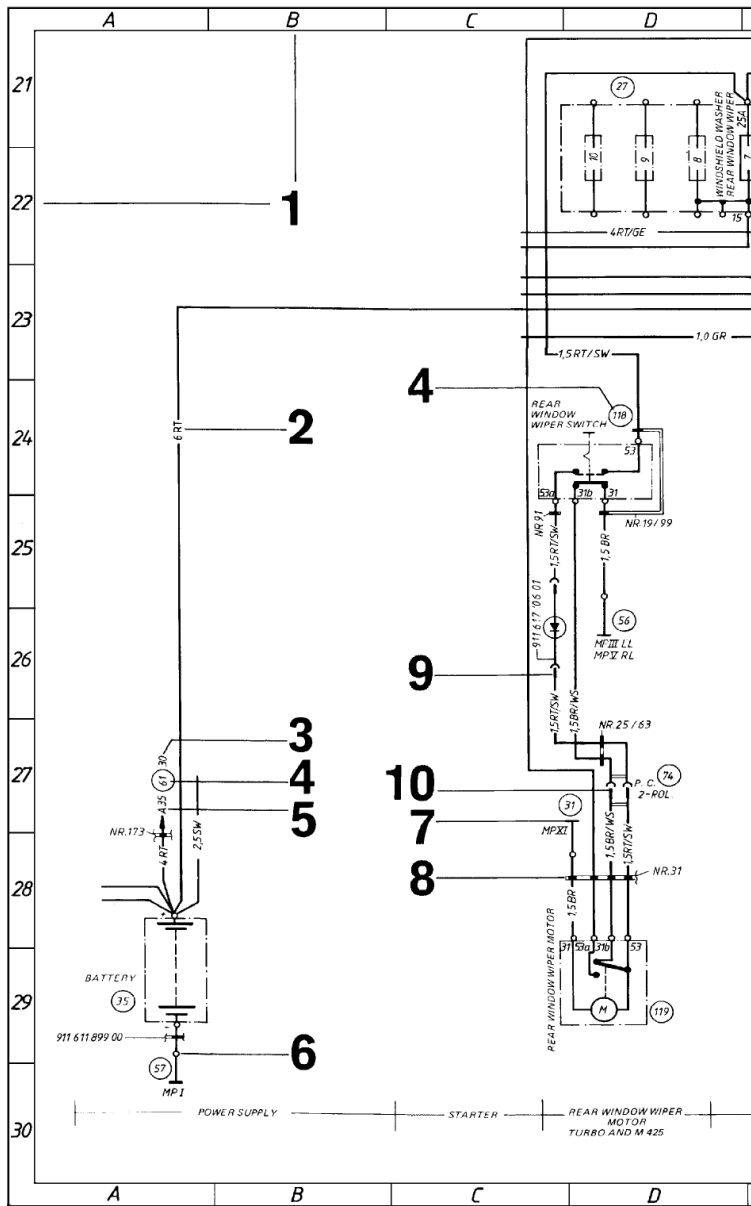

## Key To Image

- 1 - Coordinates
- 2 - Wire cross section size with wire color code (E.G. 6.0 sq.mm, Red)
- 3 - Terminal designation (E.G. Terminal 30)
- 4 - Part designation and connection of wire (See Component Index)
- 5 - Alpha-numeric Coordinate of the field to which the wire continues
- 6 - Welded connection point or harness splice
- 7 - Ground point
- 8 - Wiring harness with harness designation (E.G. Harness number 31)
- 9 - Single plug connection
- 10 - Multiple plug connection

## Wire Color Code Identification

Code	Color
BK or SW	black
WT or WS	white
RE or RT	red
GN	green
YE or GE	yellow
GR	grey
BR	brown
BL	blue
VI or LI	violet
PK	pink
OR	orange

## Diagram Sections, Fields and Wire Continuations

Porsche wiring diagrams are separated into diagram sections and use a coordinate system which divides each section into small fields. Letter coordinates span across the top and bottom of each diagram section and numeric coordinates span down each side of the diagram section. Since wiring often continues from one diagram section to a different diagram section, the alpha-numeric coordinate (5) is used to identify a field in a new diagram section in which a circuit is to be continued. To follow a circuit that continues to a new diagram section, determine the color and size of the wire, identify the new diagram section alpha-numeric coordinate, and go to the field coordinate of the new diagram section. Note that there may be more than one circuit that is continued to this field and you will need the field coordinate from which the circuit was continued and the color code of the wire to identify the correct circuit.

## M-Numbers

<b>M-Number</b>	<b>Description</b>
M 061	England Version
M 139	Adjustable Seat Heating Seat Left
M 193	Japan Version
M 208	Trailer Coupling
M 215	Saudi Arabia Version
M 221	PSD Porsche Lock Differential
M 249	Automatic Transmission
M 261	Outside Mirror Flat Passenger's Side
M 326	Radio Berlin
M 340	Adjustable Seat Heating Seat Right
M 383	Sport Seat Left
M 387	Sport Seat Right
M 454	Cruise Control
M 479	Australian Version
M 481	Transmission
M 482	RDK Tire Pressure Control
M 484	USA Version
M 513	Lumbar Support Seat Right
M 525	Alarm System with Continuous Tone (Switzerland)
M 528	Outside Mirror Convex Passenger's Side
M 533	Alarm System with Interval Tone
M 537	Seating Position Control Comfort Seat Left
M 538	Seating Position Control Comfort Seat Right
M 553	USA - Canada Version
M 562	Airbag
M 570	Additional Air Conditioner (Increased Refrigerating Capacity)
M 576	Rear Fog Light
M 586	Lumbar Support Seat Left
M 593	ABS System
M 650	Electric Sun Roof